




9100 Centre Pointe Dr. Suite 210  
West Chester, OH 45088  
Phone: (513) 870-9100

**ClarkDietrich**  
BUILDING SYSTEMS

ClarkDietrich BUILDING SYSTEMS  
TradeReady® RIM TRACK  
AS PER PLAN

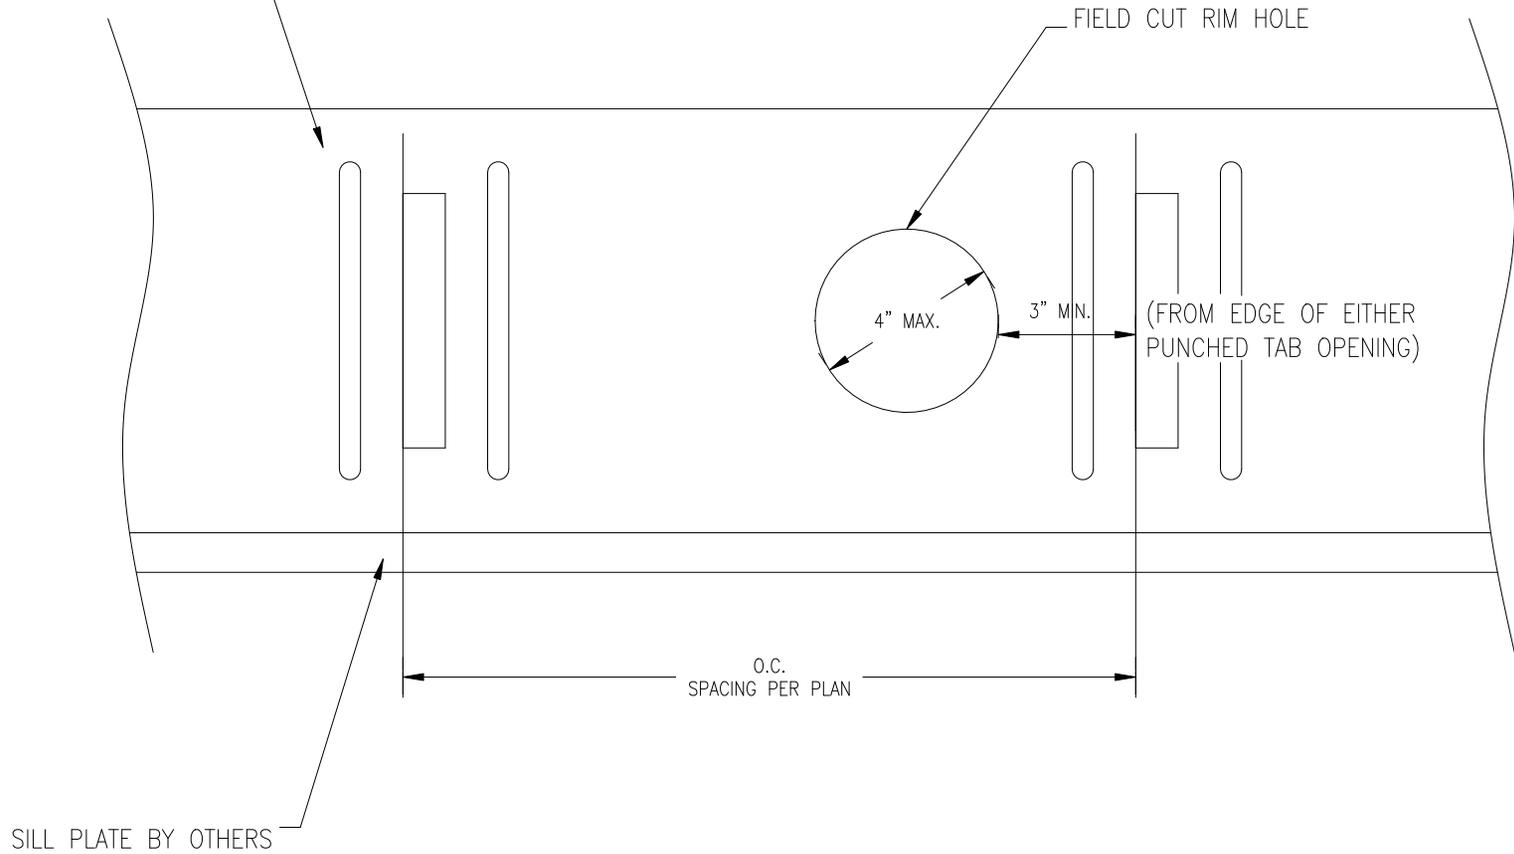

**NOTES:**

- 1) FIELD CUT RIM HOLE MUST BE CENTERED VERTICALLY WITHIN THE RIM WEB.
- 2) FIELD CUT RIM HOLE MUST BE DONE BY SAWING, SHEARING OR PLASMA CUTTING. TORCH CUTTING OF RIM IS UNACCEPTABLE.
- 3) LOAD BEARING STUDS BEARING ON THE RIM MUST ALIGN WITH JOISTS OR A LOAD DISTRIBUTION PLATE IS REQUIRED.
- 4) FIELD CUT RIM HOLES OUTSIDE OF THE PARAMETERS ABOVE MUST HAVE FURTHER ENGINEERING REVIEW.

F4100

## FIELD-CUT HOLE - RIM

ClarkDietrich TradeReady Floor Joist System

Engineering Services: (877) 832-3206

**TradeReady® FLOOR DETAILS**

Technical Services: (888) 437-3244

DRAWING:  
**F4100**